


NOTE: THE 500 NUMBER SERIES IS USED WITH THE LEFT WING.
THE 600 NUMBER SERIES IS USED WITH THE RIGHT WING.

1 IMPACT-RESISTANT DOOR (SEE B).


D09811 S0000167765_V2

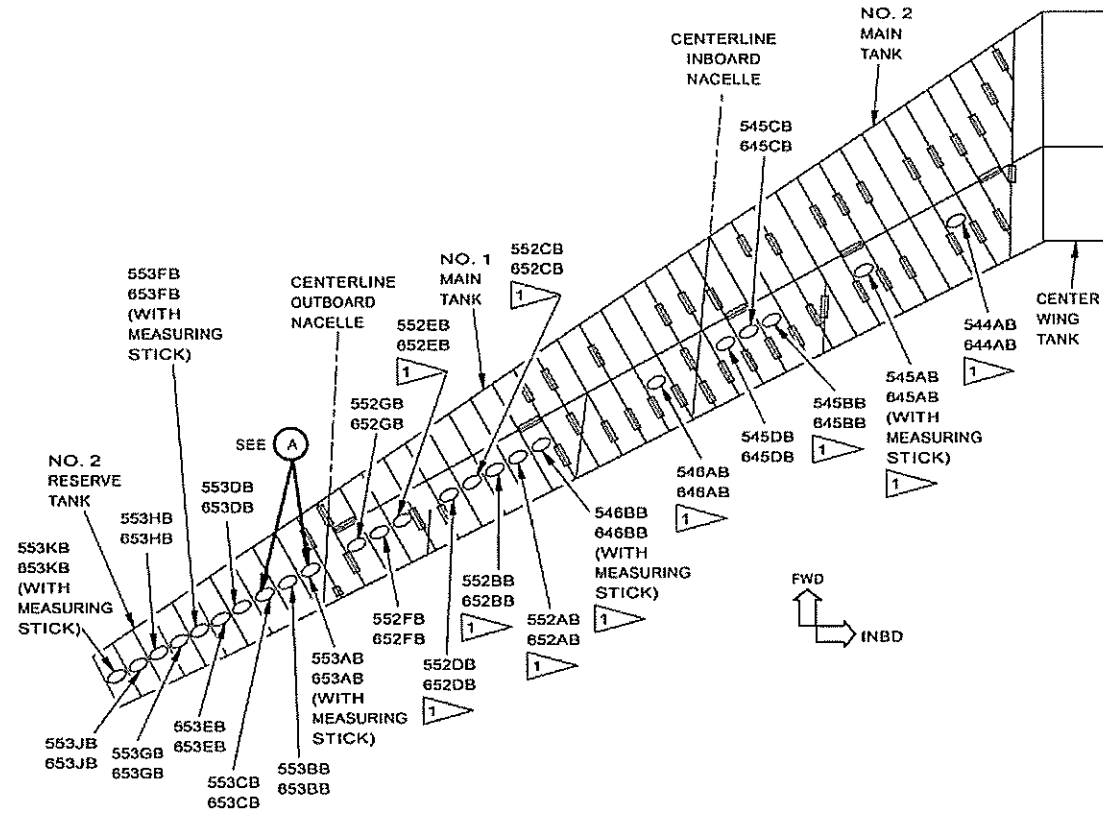

NOTE: THE 500 NUMBER SERIES IS USED WITH THE LEFT WING.
THE 600 NUMBER SERIES IS USED WITH THE RIGHT WING.


1 IMPACT-RESISTANT DOOR (SEE (B)).

280658 S0006629316_V3

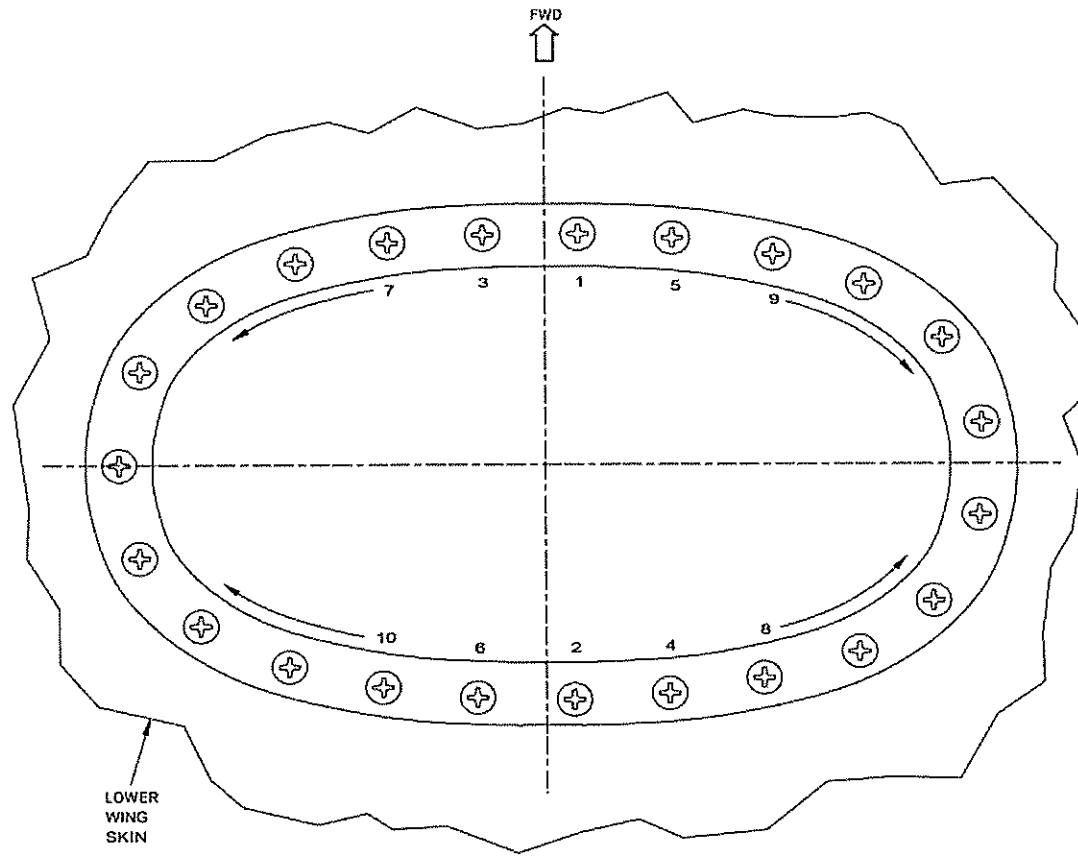

NOTE: TORQUE THE MOUNT BOLTS IN THE SEQUENCE SHOWN BY THE NUMBERS. THIS WILL MAKE SURE FUEL DOES NOT LEAK AROUND THE ACCESS PANEL.

L51189 S0006629320_V1

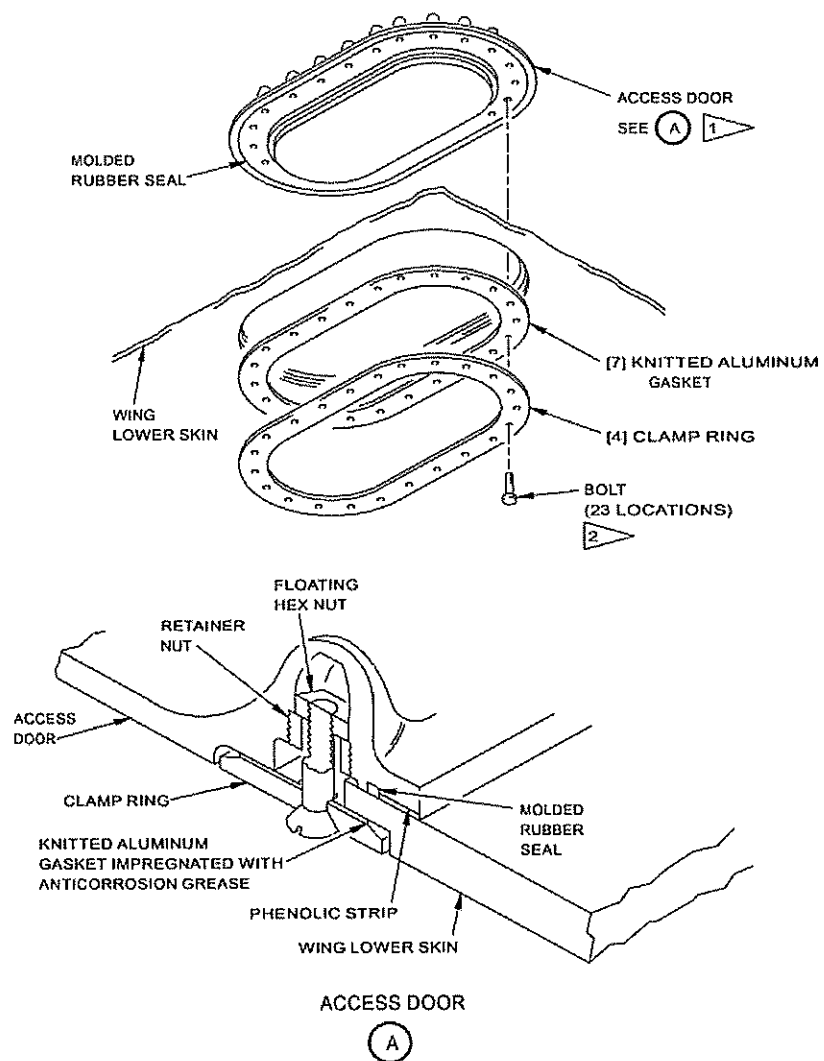

NOTE: STANDARD DOOR SHOWN
IMPACT-RESISTANT
DOOR SIMILAR

- 1 [1] ACCESS DOOR
- 2 [2] IMPACT-RESISTANT ACCESS DOOR
- 3 [3] IMPACT-RESISTANT DOOR WITH MEASURING STICK
- 5 [5] BOLT FOR ACCESS DOOR
- 6 [6] BOLT FOR IMPACT-RESISTANT ACCESS DOOR

280662 S0006629319_V3